

COMPLAINT

Excessive endplay, leftover unpopular spacers

CAUSE

Some spacers provided in spacer kits are commonly unused because of the unpopular size


CORRECTION

This Sonnax transfer shaft shim allows for accurate setting of the transfer shaft gear preload and the use of left over, unpopular washers.

Transfer Shaft Shim

32539-Z5

10 Shims (.005" thick)
Transfer Shaft Shim

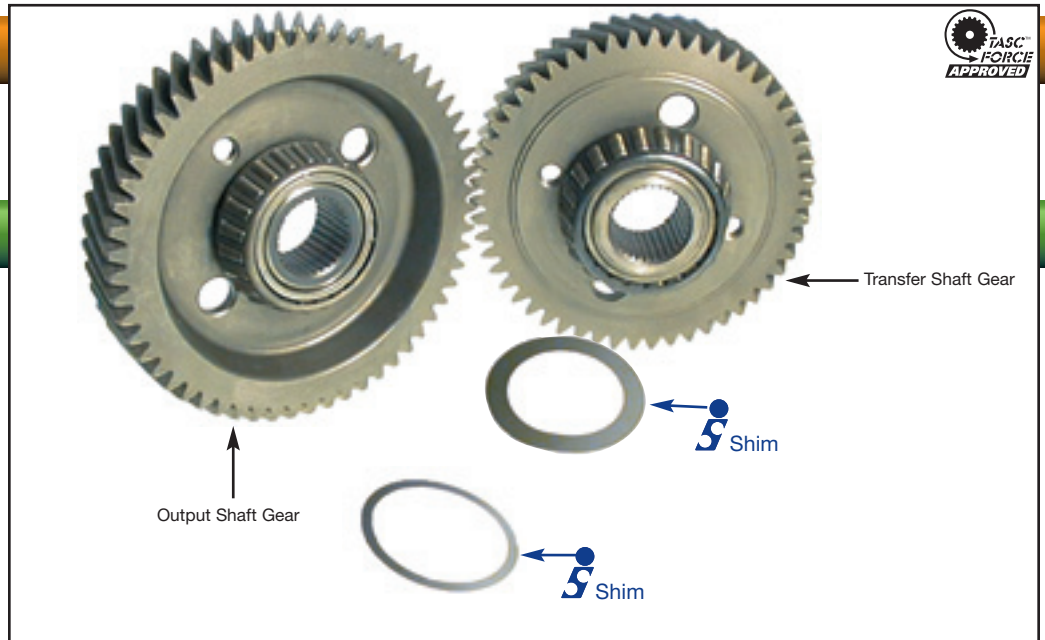

Sonnax Part Summary

When setting the preload of the transfer shaft bearing, rebuilders may exhaust popular shim sizes in current spacer kits. The Sonnax shim kit, **32539-Z5** contains 10 shims that are .005" thick. This allows the use of leftover unpopular spacers in setting the correct preload.

Features & Benefits

- Limits waste by allowing use of all of the washers provided in spacer kits.
- Provides more precise setting on transfer shaft gear preload.