

COMPLAINT

Excessive endplay and leftover unpopular spacers

CAUSE

Some spacers provided in spacer kits are commonly unused because of the unpopular size.

CORRECTION

Sonnax shims allow greater flexibility to use uncommon OEM selective spacers.


Differential Preload Shims

39540-Z5

10 Shims (.005" thick)
Differential Preload Shim
For Large Bearing
(2.88" Cup OD)

39539-Z5

10 Shims (.005" thick)
Differential Preload Shim
For Small Bearing
(2.48" Cup OD)

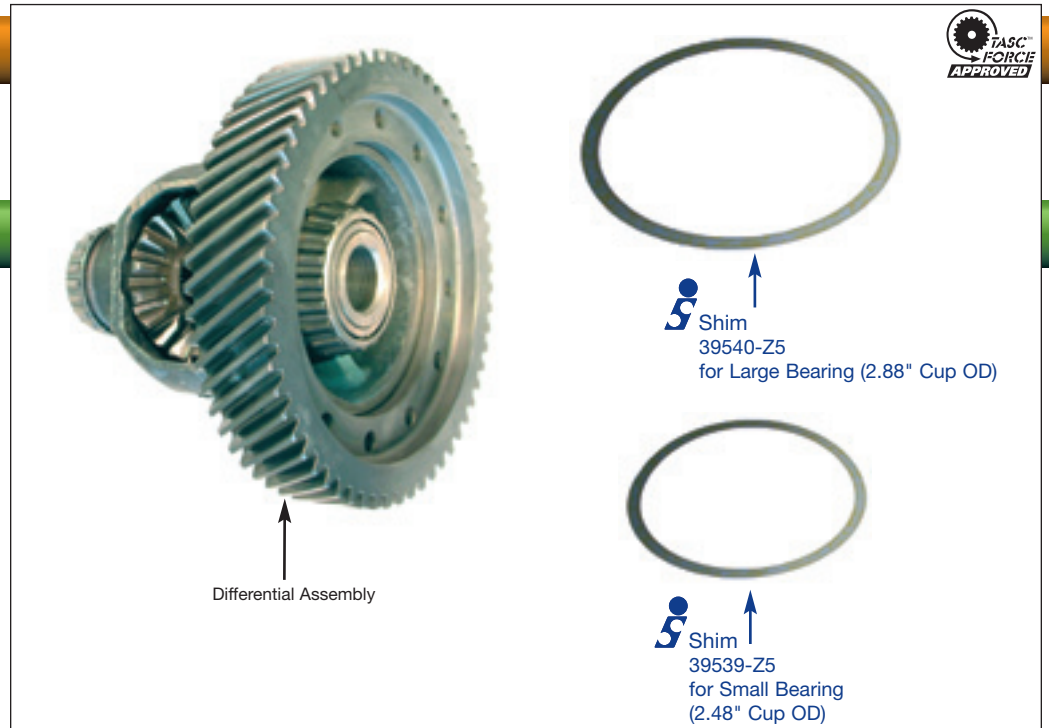

Sonnax Part Summary

It is difficult to set the proper differential bearing preload in Chrysler automatic transaxles. It is necessary to reset the preload when any of the following components are replaced: transaxle case, differential carrier, differential bearing retainer, extension housing and differential bearings. When setting the preload of the Chrysler transaxle differential bearings, rebuilders may exhaust the popular selective spacer sizes in current spacer kits..

Features & Benefits

- Limits waste by allowing use of all the washers provided in spacer kits.
- Provides more precise setting of transfer shaft gear endplay.