

COMPLAINT

SECONDARY COMPLAINTS

Loss of accumulator control

- Poor shift quality
- Damaged accumulator bore

CAUSE

Debris and piston contact can score the 4th accumulator bore.

CORRECTION


Install this sleeve and pinless accumulator piston.

4th Accumulator Bore Sleeve & Pinless Accumulator Piston Kit

34805-01K

- 1 Sleeve
- 1 Pinless Accumulator Piston
- 1 Teflon® Seal
- 1 D-Ring Seal
- 1 Pin Bore Plug

Note: U.S. Patent No. 6,899,211

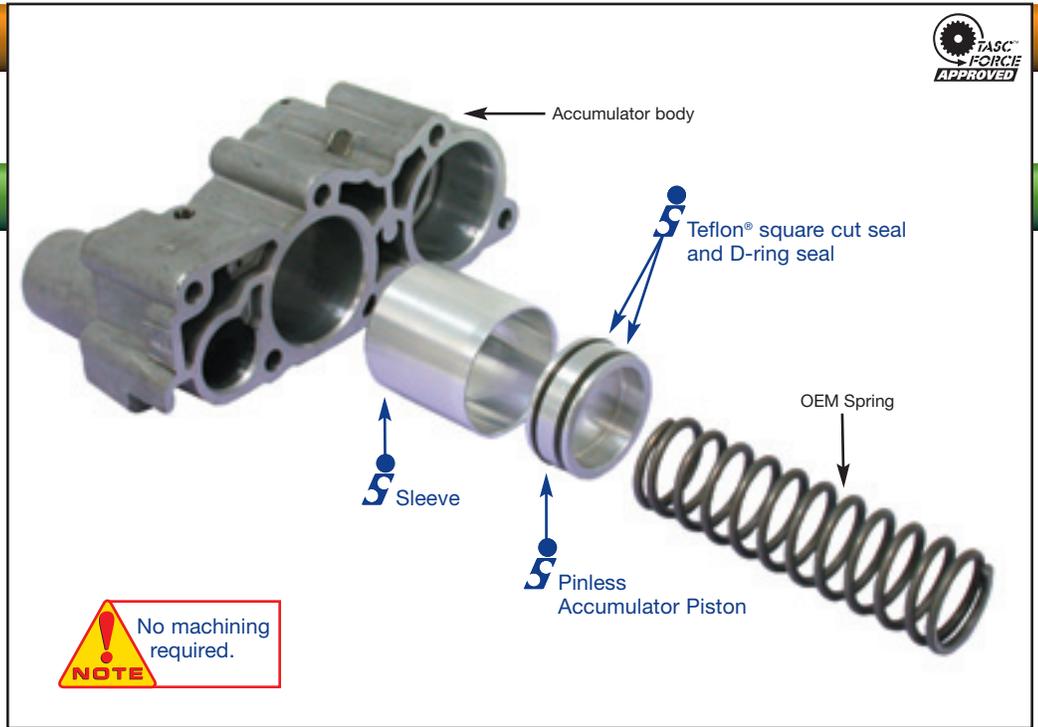

Sonnax Part Summary

Repeated reciprocation of the 4th accumulator piston causes wear at the piston/pin interface. After this wear reaches a critical point, the piston bore wear allows the piston to get cocked and gall the accumulator bore. Once this bore becomes severely galled, the accumulator body must be replaced. The Sonnax kit **34805-01K** salvages accumulator housings with a worn or scored 4th accumulator bore. The kit includes a press-in sleeve, and a pinless accumulator piston that uses a Teflon® guide ring to support the piston in the bore. No machining is required.

Features & Benefits

- Kit salvages accumulator housings with a worn or scored 4th accumulator bore.
- A press-in sleeve is included for easy installation.
- Pinless accumulator piston uses a Teflon® guide ring to support the piston in the bore.

Save

\$100 in accumulator body replacement costs