

COMPLAINT

SECONDARY COMPLAINTS

No 4th gear, drops out of 4th gear

- Loss of D3 oil • Loss of 4th signal oil

CAUSE

The hammering affect of the 3-4 relay and/or 3-4 shift valves can cause the soft aluminum end plugs to wear, resulting in loss of 4th signal and/or D3 oil.

CORRECTION

Replace the worn OEM end plugs with the o-ringed Sonnax end plugs to prevent loss of critical 4th signal and/or D3 oil.

**3-4 Relay
O-Ringed
End Plug Kit**


77964-08K

- 5 End Plugs
- 5 O-Rings

Also Available:

77754-08

Retaining Clip

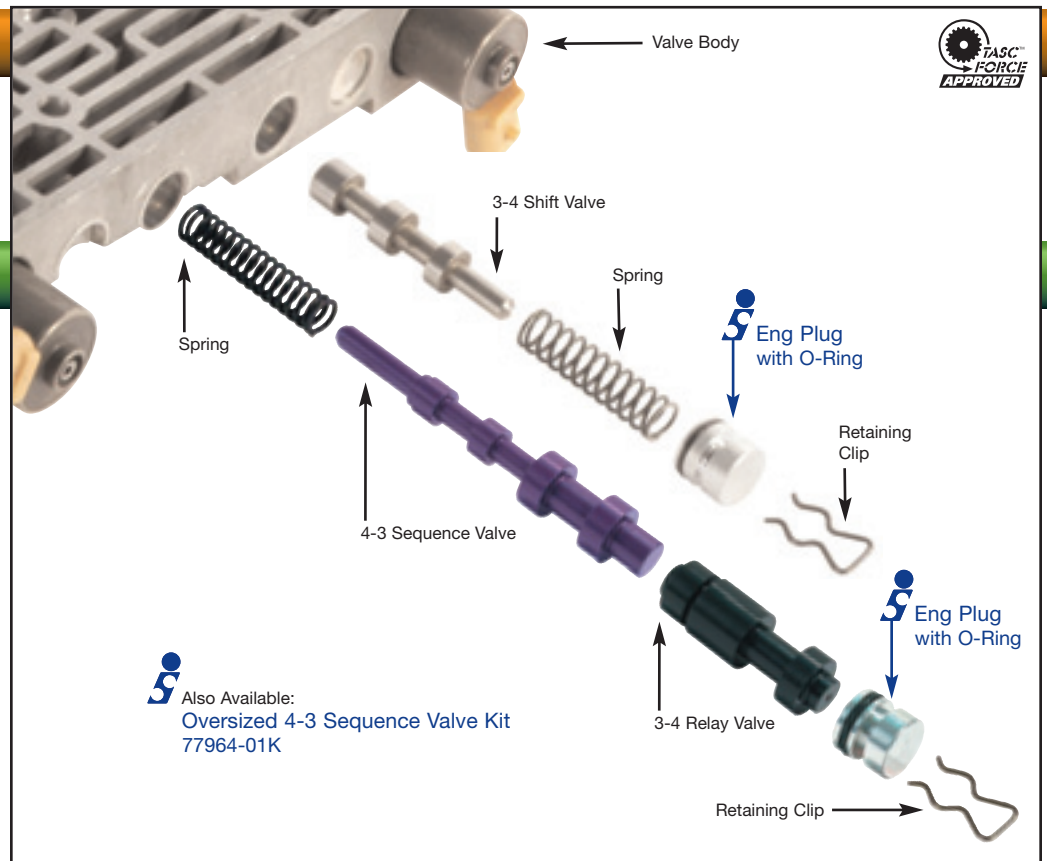

Also Available:
Oversized 4-3 Sequence Valve Kit
77964-01K

Sonnax Part Summary

The hammering effect of the 3-4 relay and/or 3-4 shift valves can cause the end plugs to wear, resulting in loss of 4th signal and/or D3 oil. Replace the worn OEM end plugs with the o-ringed Sonnax end plugs to restore hydraulic integrity and prevent loss of critical 4th signal and/or D3 oil.

Features & Benefits

- O-rings on the end plugs provide a positive seal.
- Restores hydraulic integrity at the end plug.